

Code	Function	K/P	SLT	ON/OFF Hook	Comment
[#*]	Answer Paging	Y	Y	OFF	
[#]	Background Music	Y	N	ON	
[#]	Monitor	N	Y	OFF	Connected to BUSY Extension or CO Trunk
[#0]	PAGE Internal & External	Y	Y	OFF	
[#1]	PAGE Internal	Y	Y	OFF	
[#31]	PAGE External	Y	Y	OFF	
[#4] + [xx]	Directly seize or answer CO Trunk(xx)	Y	Y	OFF	
[#51]	Baby Listening	Y	Y	OFF	At Station to be Monitored
[#52]	FIRE Alarm OFF	OPC	N	OFF	
[#53]	Toggle RS232 LOCK/UNLOCK	OPC	N	OFF	System Buffers +/- 200 calls
[#54]	Environment Monitor	Y	Y	OFF	Must have authorised level
[#56] + PW	Toggle HEADSET ON/OFF	Y	N	ON	spk key operated
[#61]	Call Doorphone 1	Y	Y	OFF	
[#62]	Call Doorphone 2	Y	Y	OFF	
[#63]	Record Voice Message (Channel 1)	OPC	N	OFF	
[#64]	Record Voice Message (Channel 2)	OPC	N	OFF	
[#71] + xx	Call Forward ALL (xx = Extn No.)	N	Y	OFF	
[#71] + yy	CANCEL C/For F/M (yy = OWN Extn No.)	N	Y	OFF	
[#72] + xx	Call Forward BUSY (xx = Extn No.)	N	Y	OFF	
[#73] + xx	Call Forward N/A (xx = Extn No.)	N	Y	OFF	
[#74] + xx	Call Forward BUSY-N/A (xx = Extn No.)	N	Y	OFF	
[#75] + xx	Call follow Me (xx = Extn No.)	N	Y	OFF	
[#761]	Set DO NOT DISTURB ON	N	Y	OFF	
[#762]	Set DO NOT DISTURB OFF	N	Y	OFF	
[#763] + n	Call Forward to Individual Speed Code (n)	N	Y	OFF	Used for Call FWD to CELL or Ext No.
[#80] + N	Toggle Call PARK	N	Y	OFF	
[#81] + SC	Enter Speed Code (SC)	N	Y	OFF	2 or 3 Digits(01 to 09) IND or (100 to 699) SYS
[#82]	Last Number REDIAL	N	Y	OFF	
[#9]	Enter FORCED ACCOUNT CODE	N	Y	OFF	
[*]	During call - Changes from Ring to Voice	N	Y	OFF	SLT to Keyphone - Unanswered
[*] + x	Group Pick Up (x = Extn. Group)	Y	Y	OFF	
[*0]	Universal Call Pickup	Y	Y	OFF	K/P can be ON HOOK
[*1}	OWN Group Pick Up	Y	Y	OFF	K/P can be ON HOOK
[*2] + x	Group Pick Up (x = Extn. Group)	Y	N	ON	
[*3] + xx	Ringing Extension (xx) Pickup	Y	N	ON	
[*4] + xx	Incoming CO Pickup (xx = CO Trunk)	Y	N	ON	